



# Dell Inspiron 15-3521 Keyboard Replacement

This repair guide will demonstrate how to replace the keyboard on a Dell Inspiron 15-3521 laptop.

Written By: Andrew Dippre





## TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

## Step 1 — Remove the Battery




- Flip the laptop over.
- Slide the latches toward the outside of the laptop to unlock the battery.
- Lift the battery out of the laptop.

## Step 2 — Removing Keyboard



- Flip laptop right side up
- Using a flat head screwdriver, depress locking tabs holding keyboard into place
- Using a spudger, pry the keyboard from the laptop, giving room to access with hands.
- Using hands, remove keyboard completely from laptop body, leaving only the connecting cord that attaches the keyboard to the laptop.

## Step 3 — Disconnecting the Keyboard Cable

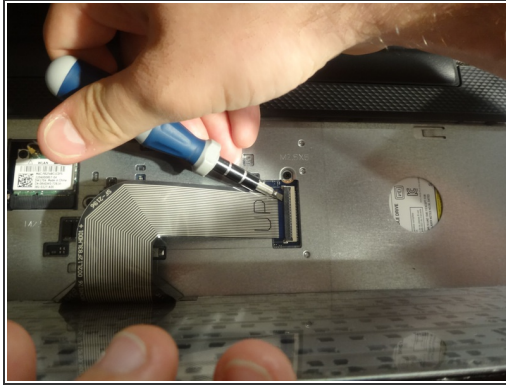

- To disconnect the keyboard, locate the keyboard cable locking mechanism.
- Open the locking mechanism by gently pulling up.
- Slide out the keyboard cable from the interface to separate the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:16:19 PM.